

# SPREADERS FIXES

Spreaders

## 1 MANUAL OPERATED



Operation	Manuel
-----------	--------

Spreader control	Mécanique
------------------	-----------

ISO container sizes	1×10', 1×20', 1×30' ou 1×40'
---------------------	---------------------------------

## 2 AUTOTWIST



Operation	Manuel ou semi-automatique
-----------	----------------------------

Spreader control	Mécanique
------------------	-----------

ISO container sizes	1×10', 1×20', 1×30' ou 1×40'
---------------------	---------------------------------

## 3 RC AUTOTWIST



Operation	RC, manuel ou semi-automatique
-----------	--------------------------------

Spreader control	Mécanique
------------------	-----------

ISO container sizes	1×10', 1×20', 1×30' ou 1×40'
---------------------	---------------------------------