


ESP
ENG
FR

POSICIONADOR DE HORQUILLAS	PS	
FORK POSITIONER	PS	
POSITIONNEUR DE FOURCHES	PS	

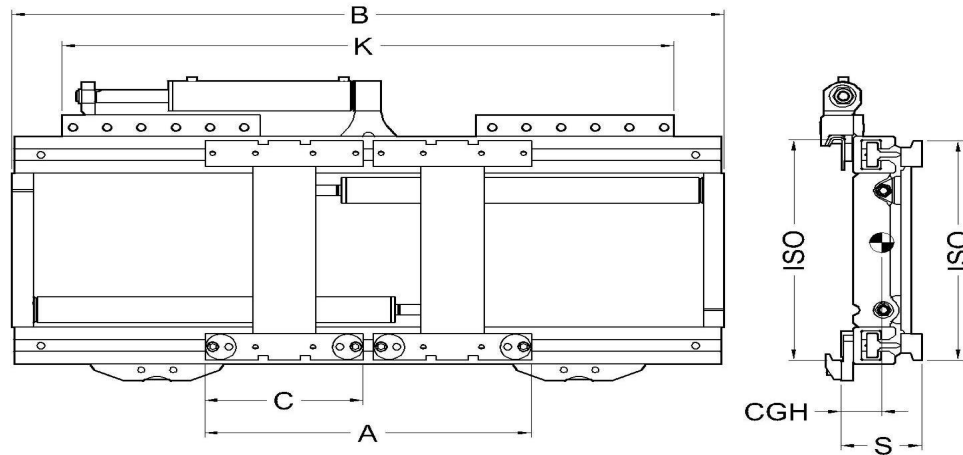

MOD.	Q kg/mm	B mm	C mm	A mm	K mm	CGH mm	S mm	P Kg	ISO
PS25K105C	2500/500	1050	250	520-1060	940	52	128	124	2
PS25K115C	2500/500	1150	250	520-1160	940	47	121	127	2
PS25K125C	2500/500	1250	250	520-1260	940	47	121	129	2
PS25K135C	2500/500	1350	250	520-1360	940	47	121	133	2
PS35K105E	3500/500	1050	250	540-1080	940	57	133	135	3
PS35K115E	3500/500	1150	250	540-1180	940	58	131	138	3
PS35K125E	3500/500	1250	250	540-1280	940	58	131	141	3
PS35K135E	3500/500	1350	250	540-1380	940	56	131	144	3
PS50K115E	5000/500	1150	300	620 - 1240	1100	65	152	179	3
PS50K125E	5000/500	1250	300	620 - 1340	1100	65	152	184	3
PS50K135E	5000/500	1350	300	620 - 1440	1100	60	152	208	3
PS50K155E	5000/500	1550	300	620 - 1640	1300	37	152	223	3
PS63K145G	6300/600	1400	350	720 - 1500	1260	72	166	302	4
PS63K165G	6300/600	1600	350	720 - 1700	1260	72	166	312	4
PS63K185G	6300/600	1800	350	720 - 1900	1260	72	166	328	4
PS63K205G	6300/600	2000	350	720 - 2100	1260	71	166	340	4
PS63K225G	6300/600	2200	350	720 - 2300	1260	71	166	344	4

ESP

2 funciones hidráulicas. Carrera desplazamiento lateral PS25/PS35 = 100+100 mm, PS50/PS63 = 125+125 mm.
Horquillas no incluidas.

No utilizar como pinza de horquillas.

Q = Capacidad de carga/Centro de carga.

Opciones: Protector de carga. Otras aperturas. Suministro de horquillas

ENG

2 hydraulic functions. Delivered without forks. Not use as fork clamp.

Q = Load capacity / Load centre

Options: Load backrest. Other openings. Fork supply

FR

2 fonctions hydrauliques. Fourches non incluses. Ne pas utiliser comme pince à fourches.

Q = Capacité de carga/Centro de carga.

Opciones: Protecteur de charge. Autres ouvertures. Approvisionnement fourches